


Mr Handsfree steering wheel interface for Blue Smart

ILLUSTRATION

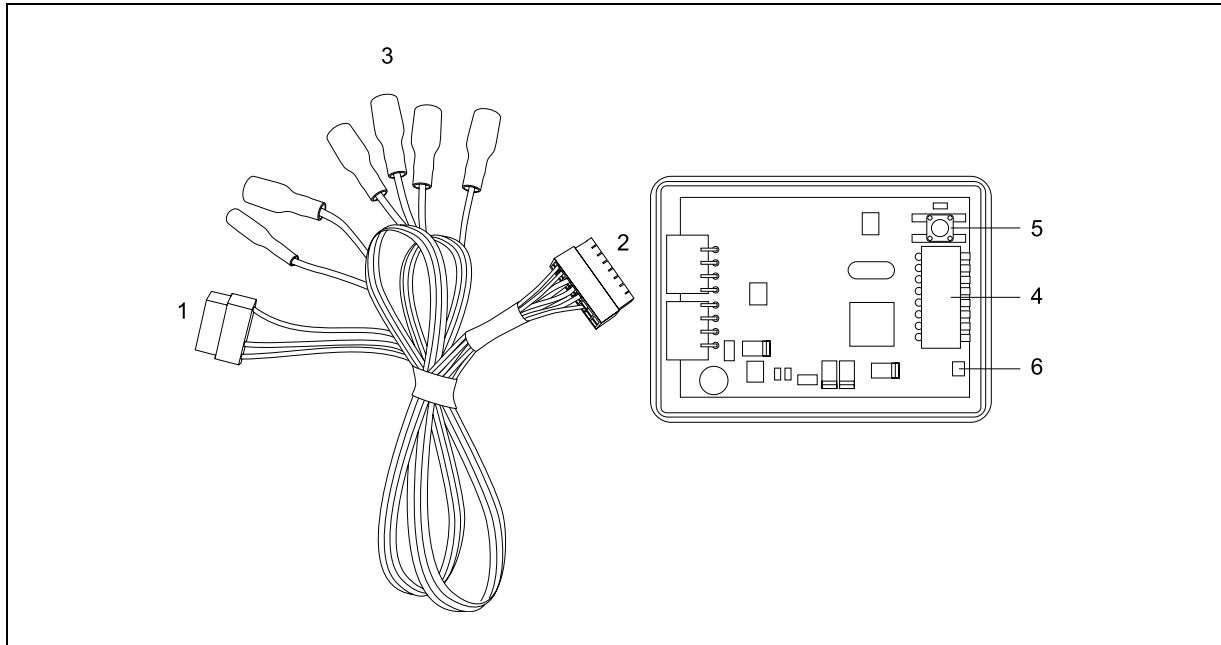


INTRODUCTION

The steering wheel interface CAN BUS – SW300 – allows you to use the existing steering wheel control buttons of your car to operate your Blue Smart carkit. By connecting the steering wheel controls of your car to the speaker/black box of your Blue Smart, you no longer need to use the Blue Smart remote control to make handsfree phone calls.

INSTALLATION

- Connect one connector of the CAN BUS interface cable (1) to the Blue Smart speaker/black box.
- Connect the other connector of the CAN BUS interface cable (2) to the CAN BUS unit.
- Connect the other cable (3) to the car as indicated hereafter:

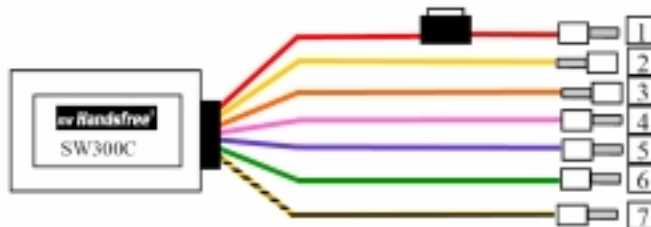


- 1: RED = Positive (INPUT)
- 2: Yellow = MUTE OUT to the radio mute
- 3: ORANGE = service +15 ignition wire (OUTPUT)
- 4: PINK = CAN BUS High Line
- 5: VIOLET = K-Bus line
- 6: GREEN = CAN BUS Low line
- 7: YELLOW/BLACK

- The exact connection procedure is depending on your car brand. For more detailed information on the connection procedure for your specific car brand, please check www.mrhandsfree.com.

SOFTWARE PROGRAMMING

Before final installation of your steering wheel interface CAN BUS – SW300 – you need to set it up according to your car brand so that you can program the correct software.

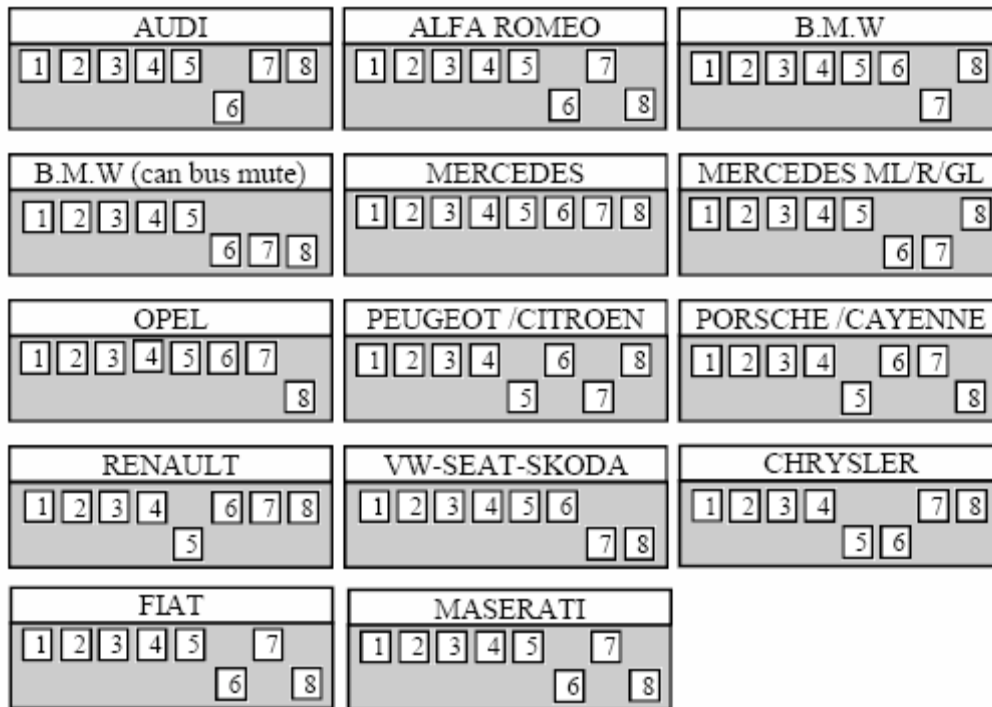


- Open the steering wheel interface unit and set the “dip switches” (4) according to your car brand as indicated hereafter. Shift the switches with care by using a small screwdriver.



Note :

- The steering wheel interface CAN BUS – SW300 – is set by default for Mercedes cars. You only need to shift the switches if you have a different car brand.
- The steering wheel interface CAN BUS – SW300 – is set to work with phone buttons, but it is also possible to use it with cars that don't have these buttons. In this case, you can use the audio control buttons.
- Press the white button (5) in the unit until the red LED indicator (6) turns on and lights continuously.
- Press the white button (5) until the red LED indicator (6) flashes. Keep pressing the button until you have reached the correct number of flashes according to these indications:
 - 1 flash = steering wheel control with audio controls (4 keys)
 - 3 flashes = steering wheel control with 2 phone keys (6 keys)
 - 4 flashes = steering wheel control with 1 phone key (5 keys)
- Press the white button (5) again until the red LED indicator (6) lights continuously.
- Close the unit.

OPERATING THE CARKIT

FUNCTIONS	CARS WITH 1 PHONE BUTTON	CARS WITH 2 PHONE BUTTONS	BMW WITHOUT PHONE BUTTON	AUDI WITHOUT PHONE BUTTON
Answering an incoming call	Press 	Press 	Press 	Press 
Hanging up a call	Press for 2 seconds 	Press 	Press for 2 seconds 	Press for 2 seconds 
Rejecting an incoming call	Press for 2 seconds 	Press 	Press for 2 seconds 	Press for 2 seconds 
Making a call by using a voice tag	Press 	Press 	Press 	Press 
Last number redialing	Press for 2 seconds 	Press for 2 seconds 	Press for 2 seconds 	Press for 2 seconds 
Switching to discrete mode	Press 	Press 	Press 	Press 
Back to handsfree mode	Press for 3 seconds 	Press for 3 seconds 	Press for 3 seconds 	Press for 3 seconds 
Adjusting the volume	Press VOLUME + to increase it Press VOLUME - to reduce it	Press VOLUME + to increase it Press VOLUME - to reduce it	Press VOLUME + to increase it Press VOLUME - to reduce it	Press VOLUME + to increase it Press VOLUME - to reduce it
Accessing in menu functions	Press Twice 	Press twice 	Press Twice 	Press Twice 
Scrolling in menu functions	Press VOLUME + to scroll up Press VOLUME - to scroll down	Press VOLUME + to scroll up Press VOLUME - to scroll down	Press VOLUME + to scroll up Press VOLUME - to scroll down	Press VOLUME + to scroll up Press VOLUME - to scroll down
Confirm a function	Press twice 	Press twice 	Press twice 	Press twice 
Canceling a menu function	Press for two seconds 	Press 	Press for two seconds 	Press for two seconds 